




04a - V6 Tool Dock Assembly.

Written By: Dan Rock


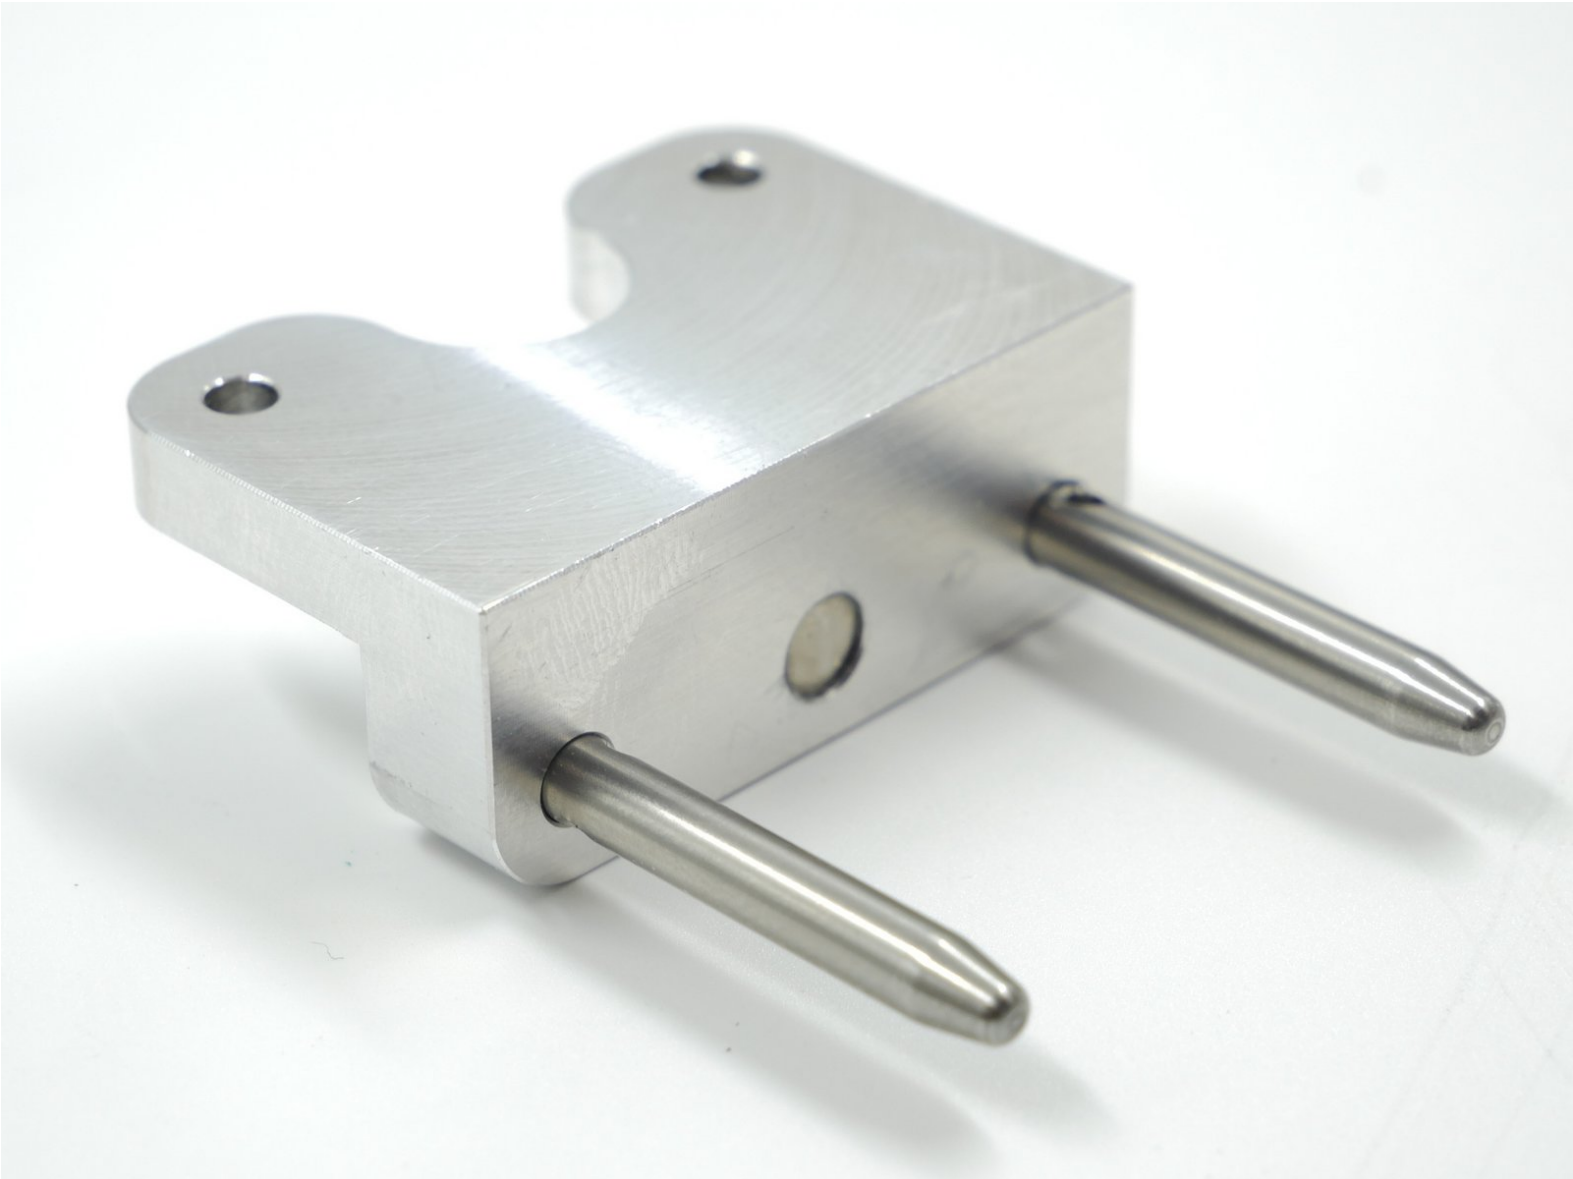


Step 1 — 04a - V6 Tool Dock Assembly.





- Gather the parts.

Step 2 — Glue.

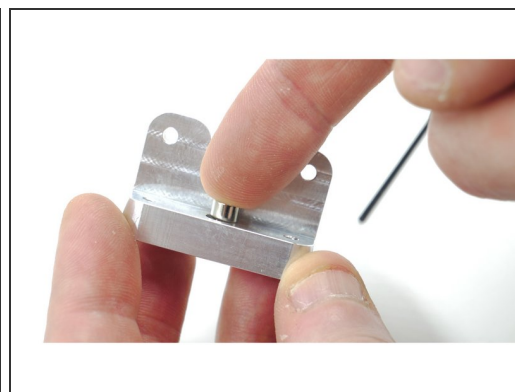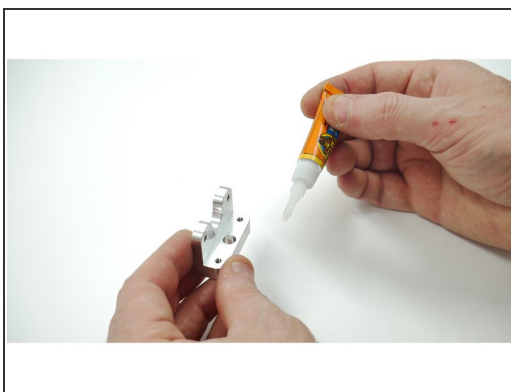




- Apply a small amount into the hole in the Dock.
- Insert the magnet.

Step 3

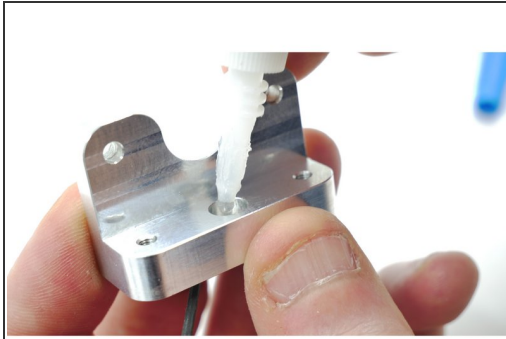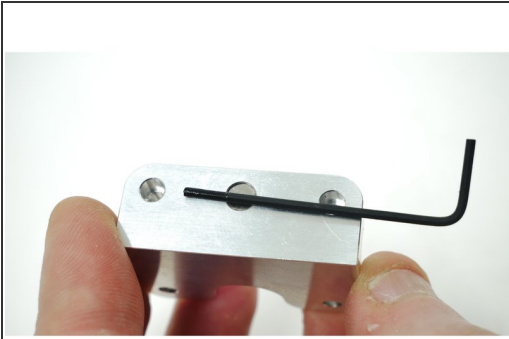

- Use an allen key or other tool to make sure the magnet is flush with the surface.
- You may want to add a drop more super glue to make sure it is fully secure.

Step 4

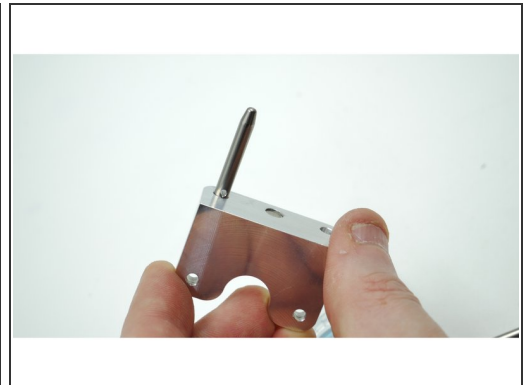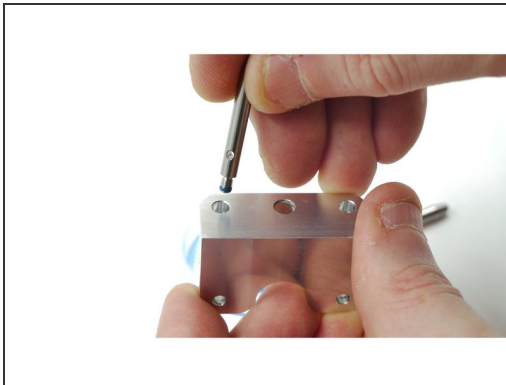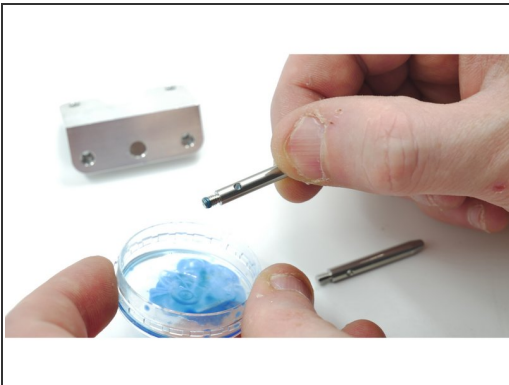



- Apply thread lock to the threads of the pins.
- Screw in the pins by hand.

Step 5



- Do the same to the other pin.

Step 6

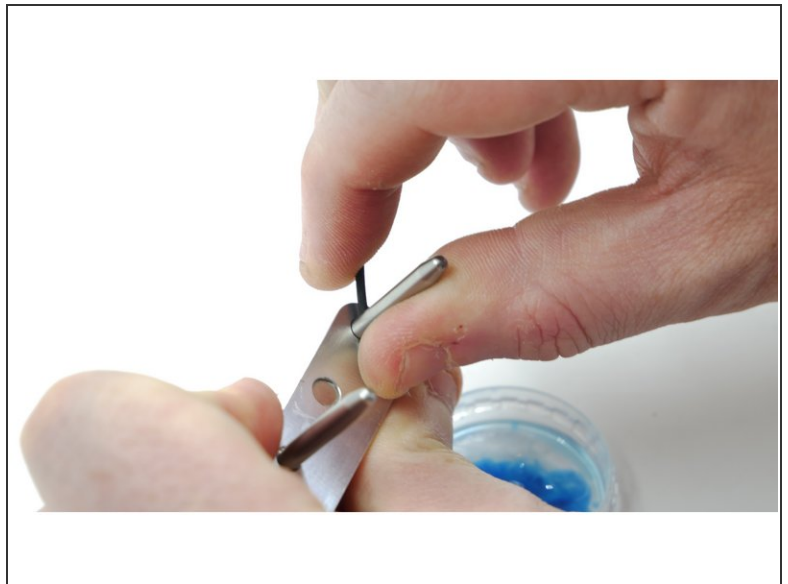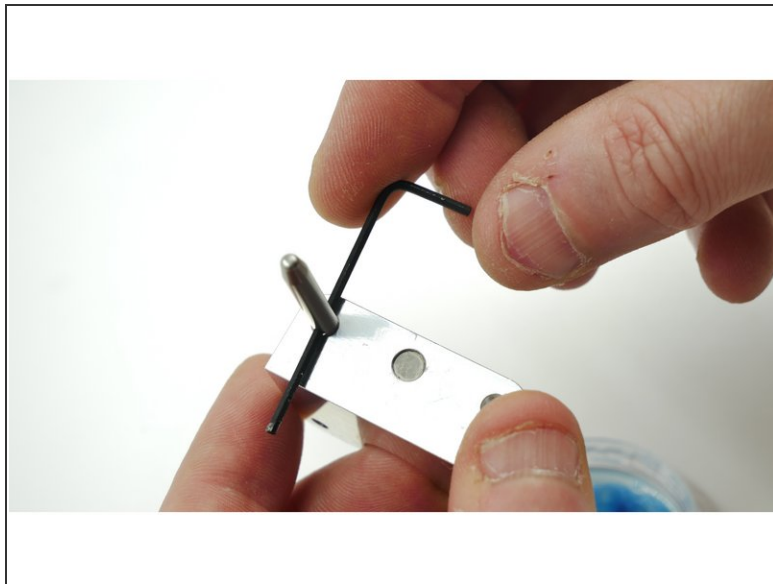



- Tighten the pins.

Step 7



- Finished Dock.

Step 8

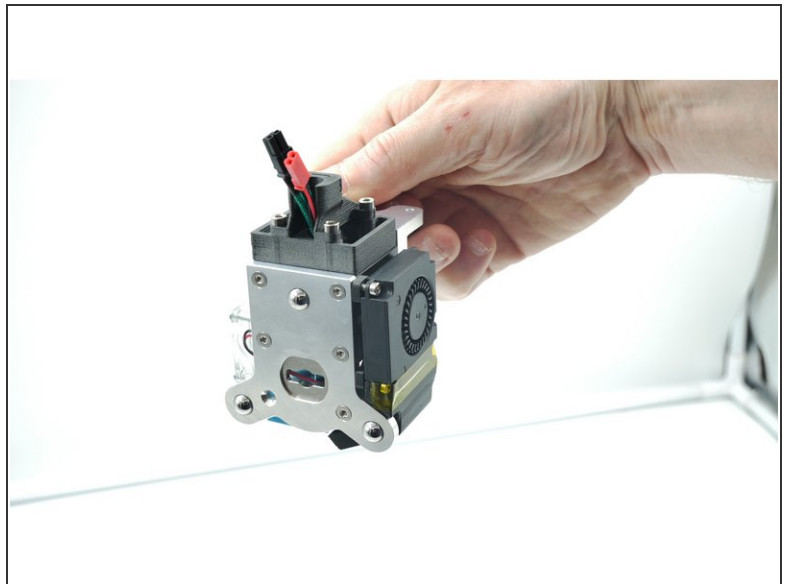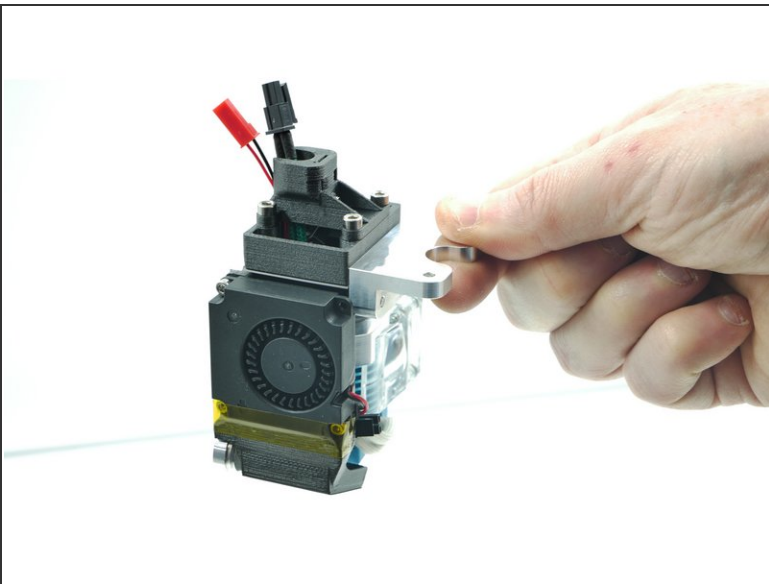

- Dock and Tool.